


# Driver Controls

## Shift Lever

Your Honda MUV is equipped with an automatic transmission. The shift lever, located to the right of the steering wheel, has three positions: drive (D), neutral (N), and reverse (R).

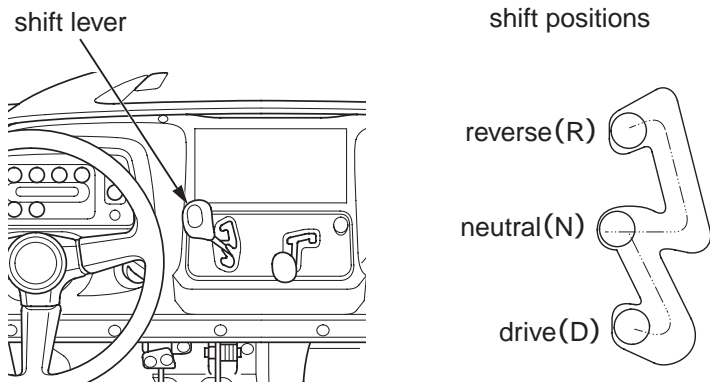

You should move the shift lever only when the vehicle is stopped with your foot on the brake pedal and with the engine idling. Use a firm motion to select the appropriate gear. Have your vehicle checked by a dealer if you experience any shifting problems.

### NOTICE

*Do not attempt to move the shift lever with the engine speed above idle or while the vehicle is moving, as you may damage the transmission.*