Air Cleaner

- 9. Allow the air cleaner to dry thoroughly before applying oil. A wet air cleaner will not fully absorb the oil.
- 10. Pour clean Pro Honda Foam Filter Oil or an equivalent over the entire surface of the air cleaner. Use both hands to evenly spread the oil into the air cleaner. Gently squeeze out any excess oil. (To keep your hands dry, place the air cleaner in a clean plastic bag before spreading the oil into the air cleaner.)
- 11. Install the air cleaner on the air cleaner body.
- 12. Install the clamp.
- 13. Insert the air cleaner assembly into the air cleaner housing.
- 14. Fasten the screw.
- 15. Reassemble in the reverse order of removal.
- 16. Lower the cargo bed (page 47).