

# Rear Differential Oil

## Oil Recommendation

API classification	GL-4 or GL-5 except oils labeled as energy conserving on the circular API service label
type	hypoid gear oil
viscosity (weight)	SAE 80
suggested oil	Honda shaft drive oil or equivalent

## Checking Oil

Refer to *Safety Precautions* on [page 79](#).

Check the differential oil level every 1,800 miles (3,000 km) or 300 hours of operating your Honda MUV, and add if needed.

1. Park your Honda MUV on a firm, level surface.
2. Remove the oil fill cap.
3. Make sure the oil level is at the lower edge of the oil fill inspection hole.
4. Apply a thin coat of grease to a new O-ring, and insert it into the oil fill cap groove.
5. Install and tighten oil fill cap to the specified torque:  
9 lbf·ft (12 N·m , 1.2 kgf·m)

### RIGHT REAR

