

# Indicators


If one of these indicators does not come on when it should, have your dealer check for problems.



**Left turn signal indicator**



**Right turn signal indicator**

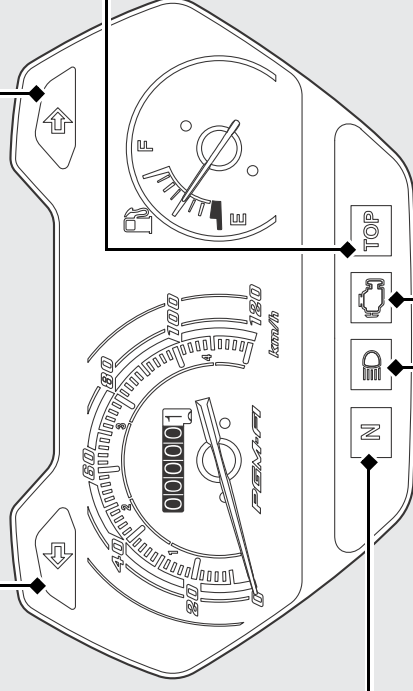

**TOP gear indicator**

Comes on when the transmission is in top (4th) gear position.



**PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)**

Comes on briefly when the ignition switch is turned on.

**If it comes on while engine is running:**



**N Neutral indicator**

Comes on when the transmission is in Neutral.



**High beam indicator**