

Troubleshooting

Engine Will Not Start	P. 72
Warning Indicators On or Flashing	P. 74
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL)	P. 74
Tyre Puncture	P. 75
Tube Repair and Replacement	P. 75
Electrical Trouble	P. 82
Battery Goes Dead	P. 82
Burned-out Light Bulb.....	P. 82
Blown Fuse	P. 89
Unstable Engine Operation Occurs Intermittently	P. 90