

Starter Motor Operates But Engine Does Not Start

NBC110MDF/MCD

Check the following items:

- Check the correct engine starting sequence.
➔ P. 21
- Check that there is petrol in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
▶ If the indicator light is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

NBC110MDF/MCD

Check the following items:

- Check the correct engine starting sequence.
➔ P. 21
- Check for a blown fuse. ➔ P. 89
- Check for a loose battery connection or battery terminal corrosion. ➔ P. 37
- Check the condition of the battery. ➔ P. 82
If the problem continues, have your motorcycle inspected by your dealer.