


## Rear Wheel

### Removal

1. Support your motorcycle securely and raise the rear wheel off the ground using the centre stand or a hoist.
2. Remove the chain covers. ► P. 63
3. Remove the rear brake adjusting nut.
4. Disconnect the brake rod from the brake arm by pushing down on the rear brake pedal.
5. Disconnect the brake stopper arm from the brake panel by removing the cotter pin, brake stopper arm nut, washer and rubber grommet.
6. Remove the rear axle nut and loosen the drive chain lock nuts and drive chain adjusting nuts.

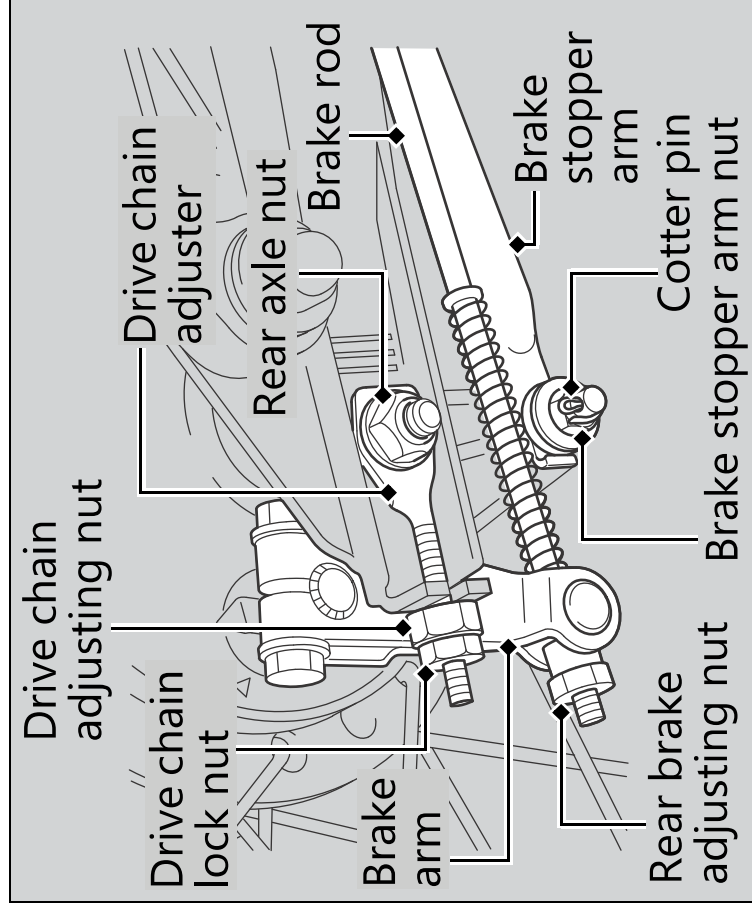

7. Remove the rear axle shaft, drive chain adjusters and side collars, then remove the drive chain from the driven sprocket by pushing the rear wheel forward.
8. Remove the rear wheel from the swingarm.