



Installation

1. To install the rear wheel, reverse the removal procedure. Install the side collars into the left and right side wheel hub.
2. Temporarily tighten the rear axle nut.

Torque: 59 N·m (6.0 kgf·m, 44 lbf·ft)

3. Reassemble the brake stopper arm and tighten the stopper arm nut, then install the new cotter pin.

Torque: 22 N·m (2.2 kgf·m, 16 lbf·ft)

4. Connect brake rod to the brake arm.
5. Adjust the drive chain slack. ► P. 64
6. Adjust the rear brake pedal freeplay. ► P. 57
7. Tighten the rear axle nut.

Torque: 59 N·m (6.0 kgf·m, 44 lbf·ft)

8. After installing the wheel, apply the brake pedal several times and then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.