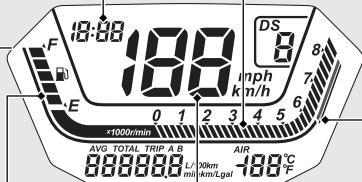


Clock (12-hour display)To set the clock: **➡ P.29****Tachometer****NOTICE**

Do not operate the engine in the tachometer red zone. Excessive engine speed can adversely affect engine life.

Tachometer red zone
(excessive engine rpm range)

Speedometer**Fuel gauge**

Remaining fuel when only 1st (E) segment starts flashing:
approximately 1.06 US gal (4.0 L)

If the fuel gauge indicator flashes in a repeat pattern or turns off: ➡ P.112

