

Instruments *(Continued)*


In addition, to return to the ordinary display at display setting.

- The button is not pressed for about 30 seconds.
- Turn the ignition switch to the OFF position and then to the ON position.

1 Changing of display backlight color and ring illumination color:

- 1 Turn the ignition switch to the ON position.
- 2 Press and hold the **SEL** button and the **SET** button, the backlight and ring illumination colors start flashing.
- 3 Press the **SEL** button. The backlight and ring illumination colors are switched.
 - ▶ Press and hold the **SEL** button to advance the set color fast.

- ▶ When "COL A" (COLOR AUTO) is set, the display backlight and the ring illumination colors change in accordance with changing the transmission between N, D, and S or changing between MT mode and AT mode.
- ▶ When you select "COL 1" to "COL 25" (COLOR 1 through 25), color is fixed to the set color and will not change.

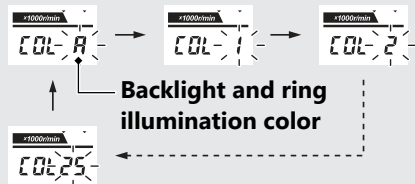

- 4 Press the **SET** button. The backlight and illumination colors are set, and then the display moves to the backlight brightness adjustment.