

## 5 Changing of fuel mileage meter unit:

- 1 Press the **SEL** button to select "L/100 km" or "km/L."




- 2 Press the **SET** button. The fuel mileage meter unit is set, and then the display moves to the changing of temperature gauge unit.

## 6 Changing of temperature gauge unit:

You can select the temperature gauge unit.

- 1 Press the **SEL** button to select "°F" or "°C."

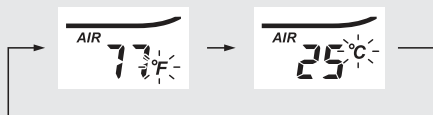

- 2 Press the **SET** button. The temperature gauge unit is set, and then the display returns to the changing of display backlight color and ring illumination color.

The control is automatically switched from the setting mode to the ordinary display if the button is not pressed for about 30 seconds. Even in this case, established setting is maintained.