


Instruments (Continued)

ON/OFF Setting Mode

1 ECO mode setting:

You can set on or off of the ECO mode.

- 1 Select the ON/OFF setting mode.  P.36
- 2 Press the SEL button to select "On" or "OFF".



- 3 Press the SET button. The ECO mode is set, and the display moves to the shift up mode setting.
 - ▶ When the tachometer segment color is set to GREEN or AQUA and the ECO mode is set to on, the user setting color will automatically change to WHITE.

2 Shift up mode setting:

You can set on or off of the shift up mode.

- 1 Press the SEL button to select "On" or "OFF".



- 2 Press the SET button. The shift up mode is set.
 - ▶ When the tachometer segment color is set to AMBER and the shift up mode is set to on, the user setting color will automatically change to WHITE.
 - ▶ When the shift up mode is set to on, the display moves to the shift up point adjustment.
 - ▶ When the shift up mode is set to off, the display moves to the activating/deactivating of tripmeter A, average fuel mileage and fuel consumption automatic reset mode.