

Drive Chain ► Adjusting the Drive Chain Slack

5. Inspect the sprockets. ➤ P. 86
6. Clean and lubricate the drive chain.
➤ P. 87

Adjusting the Drive Chain Slack

Adjusting the chain requires special tools. Have the drive chain slack adjusted by your dealer.

NC750XA NC700XD NC750XD

When adjusting the drive chain slack, be careful not to damage the wheel speed sensor and pulser ring.

1. Shift the transmission to Neutral. Stop the engine.
2. Place your motorcycle on its side stand on a firm, level surface.
3. Loosen the rear axle nut.
4. Loosen the lock nuts on both sides of the swingarm.

