

Troubleshooting

Engine Will Not Start	P. 128	Battery Goes Dead.....	P. 142
Overheating (High coolant temperature indicator is on)	P. 129	Burned-out Light Bulb	P. 142
Warning Indicators On or Flashing	P. 130	Blown Fuse.....	P. 146
Low Oil Pressure Indicator	P. 130		
PGM-FI (Programmed Fuel Injection)			
Malfunction Indicator Lamp (MIL).....	P. 130		
ABS (Anti-lock Brake System) Indicator	P. 131		
If the “-” Indicator is Blinking in the Gear			
Position Window While Riding	P. 132		
Other Warning Indications	P. 133		
Fuel Gauge Failure Indication.....	P. 133		
Tire Puncture	P. 134		
Electrical Trouble	P. 142		