

Tachometer

NOTICE

Do not operate the engine in the tachometer red zone. Excessive engine speed can adversely affect engine life.

Tachometer red zone
(excessive engine rpm range)


Speedometer

Clock (12-hour display)

To set the clock: (P29)


Gear position indicator

The gear position is shown in the gear position indicator.

- ▶ "-" flashes when the ignition switch is turned on with the engine stop switch  (Off) position.
- ▶ "-" appears when the transmission is not shifted properly.

Fuel gauge

Remaining fuel when only 1st (E) segment starts flashing: approximately 0.87 US gal (3.3 liters)

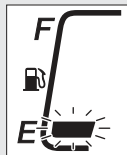

If the fuel gauge indicator repeat flashing or turned off: (P114)