

5. Inspect the sprockets. ➤ P. 68
6. Clean and lubricate the drive chain.
➤ P. 68

Adjusting the Drive Chain Slack

Adjusting the chain requires special tools. Have the drive chain slack adjusted by your dealer.

NC700XD only

When adjusting the drive chain slack, be careful not to damage the wheel speed sensor and pulser ring.

1. Place your motorcycle on the side stand on a level surface.
2. Place the transmission in Neutral. Stop the engine.
3. Loosen the rear axle nut.

Drive Chain ► Adjusting the Drive Chain Slack

4. Loosen the lock nuts on both sides of the swingarm.

