

Troubleshooting

Engine Will Not Start	P. 109
Overheating (High coolant temperature indicator is on)	P. 110
Warning Indicators On or Flashing	P. 111
Low Oil Pressure Indicator	P. 111
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL)	P. 111
ABS (Anti-lock Brake System) Indicator (NC700XD only)	P. 112

If the “-” Indicator is Blinking in the Gear Position Window While Riding	P. 113
Other Warning Indications	P. 114
Fuel Gauge Failure Indication	P. 114
Tire Puncture	P. 115
Electrical Trouble	P. 123
Battery Goes Dead	P. 123
Burned-out Light Bulb	P. 123
Blown Fuse	P. 127