


Main Fuse

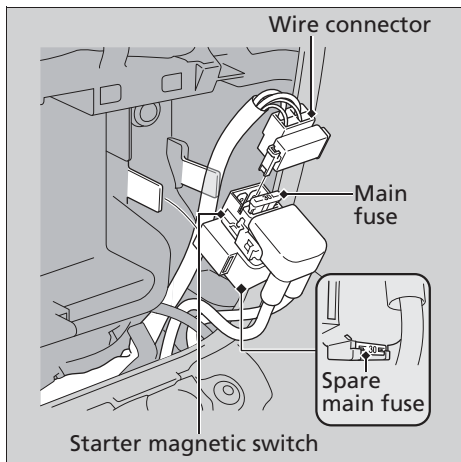

1. Open the luggage box. ► P. 50
2. Remove the maintenance lid. ► P. 74
3. Remove the battery. ► P. 78

4. Disconnect the wire connector of the starter magnetic switch.
5. Pull the main fuse out and check for a blown fuse.
Always replace a blown fuse with a spare of the same rating.
► Spare main fuse is provided in the starter magnetic switch.
6. Reinstall parts in the reverse order of removal.

NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.