

Load Limits.....	15
Loading Guidelines	15
Low Oil Pressure Indicator	32
Lower Fairing.....	75, 76
Luggage Box.....	50

M

Maintenance

Fundamentals.....	60
Importance.....	55
Safety.....	56
Schedule	57
Maximum Weight Limit.....	15
Modifications.....	14
MT Mode	45, 46

N

N-D Switch	37, 46
Neutral Indicator	33

O

Odometer	21, 131
----------------	---------

Oil

Engine	66, 82
Overheating	110
Oxygenated Fuels	145

P

Parking	12
Parking Brake.....	92
Parking Brake Indicator.....	33
Parts Location	16
PGM-FI (Programmed Fuel Injection)	
malfunction indicator lamp (MIL)...	32, 111
Protective Apparel.....	9

R

Rear Seat	48
Recommended	
Coolant	69, 88
Fuel	49
Oil	66
Refueling.....	48
Removal	
Battery.....	78