

Changing between Neutral and AT MODE/MT MODE

Changing from Neutral (N) to AT MODE

Press the **D-S** side of the N-D switch (①).
The D mode indicator comes on, "1" is shown in the gear position indicator and first gear is selected.

Changing from AT or MT MODE to Neutral

Press N on the N-D switch (②).

Changing between D mode and S mode while in AT MODE

Press the **D-S** side of the N-D switch. The S or D mode indicator comes on (③, ④).

Changing between AT MODE and MT MODE

Press the AT/MT switch (⑤).
The S or D indicator goes out while MT MODE is selected (⑥).

Gear position indicator

