









Maintenance Schedule

Items		Frequency*1								Regular Replace	Refer to page	
		× 1,000 mi	0.6	4	8	12	16	20	24			
		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4			
Emission-Related Items	Fuel Line				I		I		I			-
	Throttle Operation				I		I		I			122
	Air Cleaner*2					R			R			94
	Crankcase Breather*3			C	C	C	C	C	C			124
	Spark Plug		Every 16,000 mi (25,600 km): I Every 32,000 mi (51,200 km): R									100
	Valve Clearance						I					-
	Engine Oil		R		R		R		R	1 Year		105
	Engine Oil Filter		R				R					105
	Clutch Oil Filter*6		R				R					107
	Engine Idle Speed					I		I		I		-
	Radiator Coolant*7				I		I		I	3 Years		109
Cooling System					I		I		I		-	
Evaporative Emission Control System*4							I				-	

Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (➔ P. 166).
-  : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace if necessary)
- R** : Replace
- L** : Lubricate
- C** : Clean