

## Engine Oil ► Changing Clutch Oil Filter

3. Install the new clutch oil filter with the rubber seal facing in, toward the engine. You will see "OUT-SIDE" mark on the clutch oil filter body, toward the filter cover.
4. Replace the O-ring and apply a thin coat of engine oil to the new O-ring before installing it.
5. Install the spring and the clutch oil filter cover.
6. Install the clutch oil filter cover bolts and tighten.
7. Apply a thin coat of engine oil to the rubber seal of a new engine oil filter.  
➤ P. 106
8. Install a new engine oil filter and tighten.

**Torque:** 19 lbf·ft (26 N·m, 2.7 kgf·m)

9. Replace the new sealing washer. Install the drain bolt and tighten.

**Torque:** 22 lbf·ft (30 N·m, 3.1 kgf·m)

10. Fill the crankcase with the recommended oil (➤ P. 86, ➤ P. 173) and install the oil fill cap/dipstick.

### Required oil

#### When changing oil, engine oil filter & clutch oil filter:

3.6 US qt (3.4 L)

11. Check the oil level. ➤ P. 103
12. Check that there are no oil leaks.
13. Install the lower cowl.