

## Instruments (Continued)

NC750XA/XD

**Tachometer** ➔ P.30

**NOTICE**

Do not operate the engine in the tachometer red zone. Excessive engine speed can adversely affect engine life.

**Tachometer red zone**  
(excessive engine rpm range)

**S indicator** NC750XD

Comes on when the S mode is selected in the AT MODE. ➔ P.66

**Torque Control level** ➔ P.56

**Clock**

To set the clock: ➔ P.36

**Total/Fuel mileage display** ➔ P.25

**Speedometer**

**D indicator**

NC750XD

Comes on when the D mode is selected in the AT MODE. ➔ P.66

**Gear position indicator** ➔ P.35

**Fuel gauge**

Remaining fuel when only 1st (E) segment starts flashing: approximately 0.85 US gal (3.2 L)  
The reserve tripmeter display and reserve fuel consumption display show at the same time.

**If the fuel gauge indicator flashes in a repeat pattern or turns off: ➔ P.136**

