

## Instruments *(Continued)*

### 4 Activating/deactivating of tripmeter A, average fuel mileage and fuel consumption automatic reset mode:

You can also activate or deactivate the automatic reset mode by refueling after 1st (E) segment of the fuel gauge start flashing. Deactivation is initially set.

- 1 Press the SEL button to select "On" (activate) or "OFF" (deactivate) in the automatic reset mode.



- 2 Press SET button. The activation/deactivation of automatic reset mode is set, and the display returns to the ordinary display.

## ADJ Setting Mode

### 1 Clock (12/24-hour) setting:

- 1 Select the ADJ setting mode. P.36
- 2 Press the SEL button to select "12HOUR" or "24HOUR".



- 3 Press the SET button. The clock 12/24 - hour is set, and the display moves to the changing of the clock setting.