

# Honda selectable torque control

## NC750XA/XD

Torque Control level (engine power control) can be selected or turned on/off.

- ▶ Do not operate the Torque Control switch while riding.  
Stop the motorcycle first, turn the Torque Control off or on and select the desired level.
- ▶ The Torque Control setting cannot be changed or turned off when the system is activated (Torque Control indicator flashing).
- ▶ In the following cases, the Torque Control will be turned on and the specific Torque Control level will automatically be set as below.
  - Each time the ignition switch is turned to the ON position or the Torque Control is turned on: level 2


## Torque Control level setting

The level can be selected by pressing the Torque Control switch.

- ▶ Level 2: the maximum Torque Control level
- ▶ Level 1: the minimum Torque Control level

## Torque Control on and off

Torque Control can be turned on and off by pressing and holding the Torque Control switch.

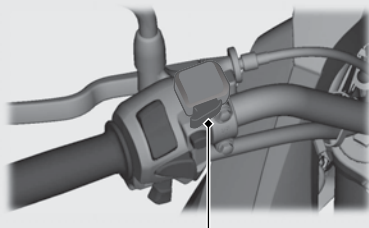

**Torque Control switch**