

| | |
|---|---------|
| L | |
| Labels..... | 8 |
| Load Limits..... | 17 |
| Loading Guidelines..... | 17 |
| Low Oil Pressure Indicator..... | 48, 132 |
| Lower Cowl..... | 99 |
| Luggage Box..... | 71 |
| M | |
| Maintenance | |
| Fundamentals..... | 82 |
| Importance..... | 76 |
| Record..... | 81 |
| Safety..... | 77 |
| Schedule..... | 78 |
| Maximum Weight Limit..... | 17 |
| Modifications..... | 16 |
| MT Mode..... | 65 |
| N | |
| N-D Switch..... | 53 |
| Neutral Indicator..... | 48 |
| O | |
| Odometer..... | 153 |
| Oil | |
| Engine..... | 88, 105 |
| Overheating..... | 131 |
| Owner's Manual..... | 73 |
| Oxygenated Fuels..... | 167 |
| P | |
| Parking..... | 13 |
| Parking Brake..... | 55 |
| Parking Brake Indicator..... | 49 |
| Parking Brake Lever..... | 55 |
| Parts Location..... | 18 |
| PGM-FI (Programmed Fuel Injection) | |
| Malfunction Indicator Lamp (MIL).... | 49, 132 |
| Position Light..... | 146 |
| Protective Apparel..... | 10 |
| R | |
| Rear Seat..... | 69 |