


Changing the mileage unit:

- ① Turn the ignition switch on.
- ② Select the odometer display.  P. 21
- ③ Press and hold the MODE switch to select the "mile" or "km".

