

Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.




High beam indicator



High coolant temperature indicator

If it comes on while riding: ➡ P. 85

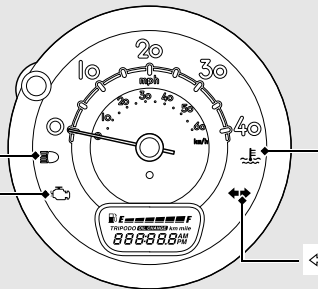

Turn signal indicator



PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned on.

If it comes on while engine is running: ➡ P. 86