

Starting the Engine

Start your engine using the following procedure, regardless of whether the engine is cold or warm.



NOTICE

- If the engine does not start within 5 seconds, turn the ignition off and wait 10 seconds before trying to start the engine again to recover battery voltage (Using the start button).
- Extended fast idling and revving the engine can damage the engine, and the exhaust system.
- The engine will not start if the throttle is fully open.

Consult your dealer for advice if you plan to ride your scooter at an altitude above 8,000 feet (2,500 m).

NOTICE

If the scooter is transported to a place 6,500 feet (2,000 m) higher or lower than the start point, you may not be able to achieve sufficient engine performance at the new altitude. Consult your dealer before transporting your scooter.

- 1 Place the scooter on its center stand.
- 2 Lock the rear brake.  P.29
▶ The starter motor will only work when the brake lever is pulled in.
- 3 Make sure the engine stop switch is in the RUN  position.
- 4 Turn the ignition switch to the ON position.

