Refueling (Continued)

Closing the Fuel Fill Cap

- After refueling, align the fuel fill cap latch with the slot in the filler neck. Push the fuel fill cap into the filler neck until it snaps closed and locks.
 - ► Make sure that the arrow mark on the fuel fill cap faces forward.
- 2 Remove the key.
 - ► The key cannot be removed if the cap is not locked.
- (3) Close the fuel lid.

AWARNING

Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine, and keep heat, sparks, and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.