


## Fuse Box Maintenance Cover

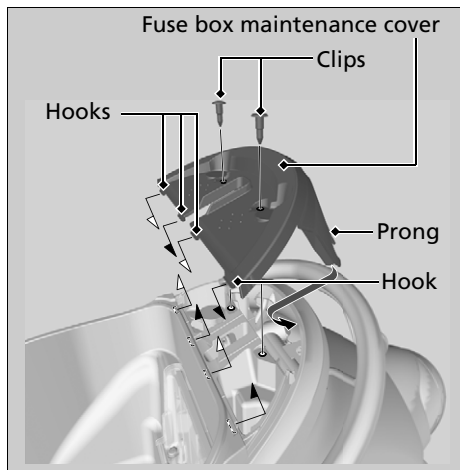

### Removal

1. Open the seat. ► P. 37
2. Remove the clips. ► P. 64
3. Remove the hooks.
  - Remove the outside hooks at first, then remove the inside hooks.
4. Remove the fuse box maintenance cover by lifting it and removing the prongs from the body cover.

### Installation

Install the parts in the reverse order of removal.