


3. Push the brake arm to confirm that there is a gap between the rear brake adjusting nut and brake arm pin.

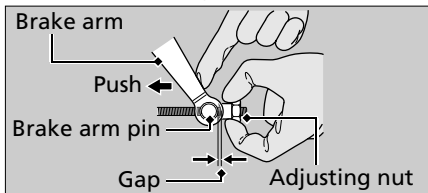

After adjustment, confirm the freeplay of the brake lever.

NOTICE

Do not turn the adjuster beyond its natural limits.

Make sure the brake arm, spring, and fastener are in good condition.