
Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.

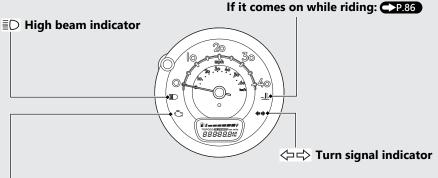

LE High coolant temperature indicator

PGM-FI (Programmed Fuel Injection) malfunction indicator almp (MIL)

Comes on briefly when the ignition switch is turned to the ON position.

If it comes on while engine is running: **P.87**