

Overheating	88
Oxygenated Fuels.....	114

P

Parking	11
Parts Location.....	18
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL).....	24, 89
Protective Apparel.....	9

R

Rear Brake Lock.....	30
Recommended	
Coolant.....	58
Fuel.....	37
Oil	57
Refueling.....	37
Removal	
Battery.....	64
Battery Lid.....	65
Center Cover.....	66
Clip.....	67
Maintenance Cover	68
Repair Kit.....	91

Reporting Safety Defects.....	119
Riding	35
Riding Precautions	10

S

Safety Labels	7
Safety Precautions.....	9
Seat	39
Shutter.....	29
Spark Plug	69
Specifications.....	120
Speedometer	20
Start Button.....	26
Starting the Engine	31
Steering Lock	28
Stopping Engine	27, 101
Storage	
Center Compartment.....	40
Equipment	39
Fairing Pocket	42
Owner's Manual	41
Storing Your Scooter	105
Switches	26