

Instruments *(Continued)*

Display Setting

You can adjust the following settings.

- Clock setting
- Changing of mileage unit

To set the clock:

- 1 Turn the ignition switch to the ON position.
- 2 Select the clock display. **➡ P.21**
- 3 Press and hold the MODE switch until the hour digits start flashing.



- 4 Press the MODE switch until the desired hour and AM/PM are displayed.



- 5 Press and hold the MODE switch until the minute digits start flashing.



- 6 Press the MODE switch until the desired minute is displayed.



- 7 Press and hold the MODE switch. The clock is set.
 - ▶ The time can also be set by turning the ignition switch to the OFF position.
 - ▶ The display will stop flashing automatically and the adjustment will be canceled if the button is not pressed for about 30 seconds.