

Maintenance Schedule

Items	Frequency	Odometer Reading*1							Regular Replace	Refer to page	
		× 1,000 mi	0.6	4	8	12	16	20			24
		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0			38.4
Fuel Line	↗			I	I	I	I	I	I		-
Throttle Operation	↗			I	I	I	I	I	I		84
Air Cleaner*2					R		R		R		64, 76
Crankcase Breather*3				C	C	C	C	C	C		85
Spark Plug				I	R	I	R	I	R		70
Valve Clearance	↗			I	I	I	I	I	I		-
Engine Oil			R	R	R	R	R	R	R		73
Engine Oil Strainer Screen					C		C		C		73
Engine Idle Speed	↗		I	I	I	I	I	I	I		-
Radiator Coolant*4					I		I		I	3 Years	77
Cooling System	↗				I		I		I		-

Maintenance Level

- ↗ : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (▶ P. 116).
- ✂ : Technical. In the interest of safety, have your vehicle serviced by your dealer.

Maintenance Legend

- I : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R : Replace
- C : Clean