


## Cleaning the Crankcase Breather

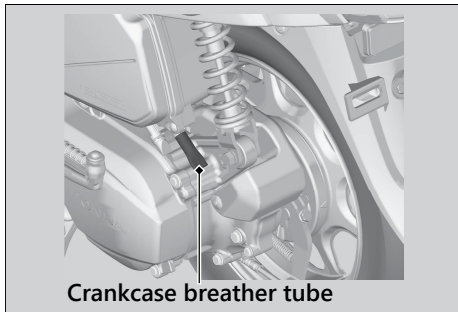

1. Place a suitable container to receive deposits.
2. Remove the crankcase breather tube and drain deposits into the container.
3. Reinstall the crankcase breather tube.