

### Adjusting the Headlight Aim

You can adjust vertical aim of the headlight for proper alignment by moving the headlight lens. To move the headlight lens, loosen the bolt. Tighten the bolt after adjustment.

Obey local laws and regulations.

