

# Driver Controls

## SPORT Switch (except for SXS1000M3)


The SPORT switch is under the AT/MT switch.

When AT mode is selected and the shift select lever is in the high-range (H) position, you can switch between turning SPORT mode on and off by pressing the SPORT switch.

When the shift select lever is in the low-range (L) position, SPORT mode will not turn on even if the SPORT switch is pressed.

When MT mode is selected, SPORT mode will not turn on even if the SPORT switch is pressed.

(SXS1000M3P/M5P/M5D)

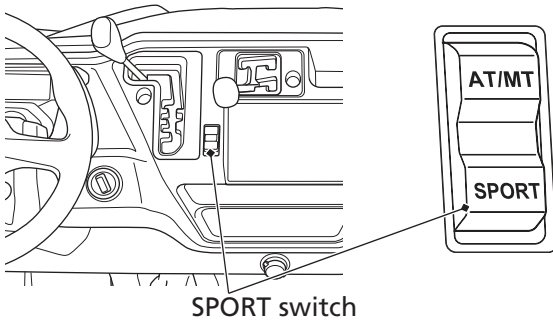

(SXS1000M3L/M5L)

