

Maintenance Schedule

Service the items listed at the indicated distance (or time, if given).											
		Initial maintenance	Regular maintenance interval						Note	Refer to page	
ITEMS	FREQUENCY	x100 mi	1	6	12	18	24	30	36		
	(Whichever comes first)	x100 km	1.5	10	20	30	40	50	60		
	Hours	20	100	200	300	400	500	600			
	Check engine oil and coolant		Check oil and coolant at fuel stop							151, 170	
	Check tires		Check inflation and condition once a month							203	
	Check side net and snap hooks		•	•	•	•	•	•	•		56
	Check brake fluid		Check fluid level once a month							197	
	Replace engine oil and oil filter		•		•		•		•		153
	Check sub-transmission oil		•		•		•		•		161
	Replace sub-transmission oil			Every 2 years (regardless of mileage)							163
	Replace DCT oil filter		•				•				158
*	Inspect valve clearance		•				•		•	1	—
*	Clean spark arrester			•	•	•	•	•	•		187
	Replace air cleaner element								•	2	174
	Clean sub air cleaner element					•			•	2	176
	Check spark plugs				•		•		•		184
*	Inspect idle speed		•			•			•		—
*	Check fuel lines and connections					•			•		—
	Check front and rear brakes		•			•			•	3	196
	Check front and rear final gear oil		•			•			•		165, 167

* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 280).

Note 1 Inspect valve clearance as needed, if engine is noisy.

Note 2 Service more frequently when operating in dusty areas, sand or snow.

Note 3 Service more frequently when operated in muddy conditions.