

If the Transmission Is Not Functioning Properly

If the gear position indicator is blinking, perform the following:

1. If you are driving your Honda SXS, stop at a safe place.
2. Shift the shift select lever to the park (P) position.
3. Check the pattern displayed on the gear position indicator, and then perform the following.

“P”, “R”, “N”, “H” or “L” is blinking:

You can drive in either AT mode or MT mode. See your dealer as soon as possible.

“1”, “2”, “3”, “4”, “5” or “6” is blinking:

At high-range (H) or low-range (L), you can drive only in the gear position that is blinking. You can also drive in reverse (R).

To avoid damaging the clutch, we recommend that you drive in low-range (L). The engine brake may not work, so please drive slowly. See your dealer as soon as possible.

“-” is blinking:

Check for SXS failure again. Perform the following procedure.

1. Check that the shift select lever is at the park (P) position.
2. Turn the ignition switch to the OFF (w) position.
3. Turn the ignition switch to the START (p) position and then start the engine.
4. Check the gear position indicator display, and then perform the following.

The gear position (“1”, “2”, “3”, “4”, “5” or “6”) is blinking:

At high-range (H) or low-range (L), you can drive only in the gear position that is blinking. You can also drive in reverse (R).

To avoid damaging the clutch, we recommend that you drive in low-range (L). The engine brake may not work, so please drive slowly. See your dealer as soon as possible.

(cont'd)