

# Front Hood

---

If the front hood rattles when closed, turn the hood stopper counterclockwise to adjust front hood.

## Adjust

1. Remove the front hood (page 137).
2. Turn the hood stoppers counterclockwise to extend them, and clockwise to retract them.
3. Make sure the front hood is installed securely.

