


Air Cleaner

4. Pull the air cleaner out to the right side by removing the bolt. When removing the air cleaner, be careful not to allow foreign objects to drop into the air intake ducts.

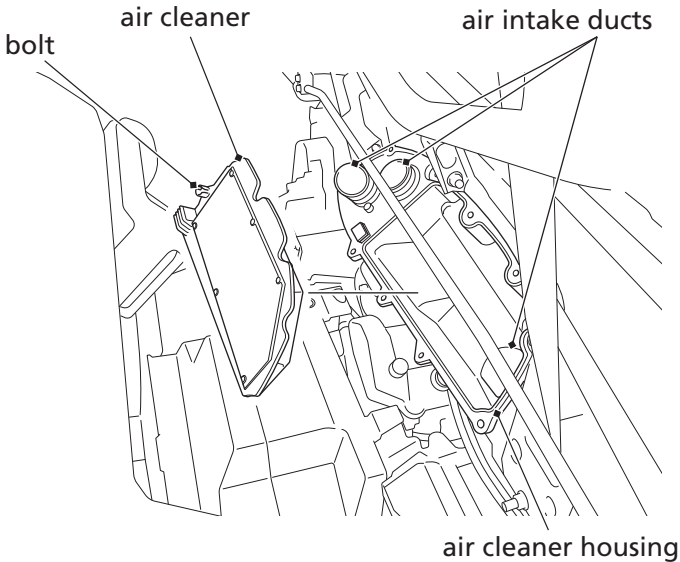

5. Insert a new air cleaner into the air cleaner housing. Make sure that the air cleaner is properly seated in the air cleaner housing.
6. Install the air cleaner housing cover by installing the bolts.
7. Install the air cleaner outer cover.
8. Lower the cargo bed.