


If a Fuse Blows

All of the electrical circuits on your Honda SXS have fuses to protect them from damage caused by excess current flow (short circuit or overload).

If something electrical on your Honda SXS stops working, the first thing you should check for is a blown fuse.

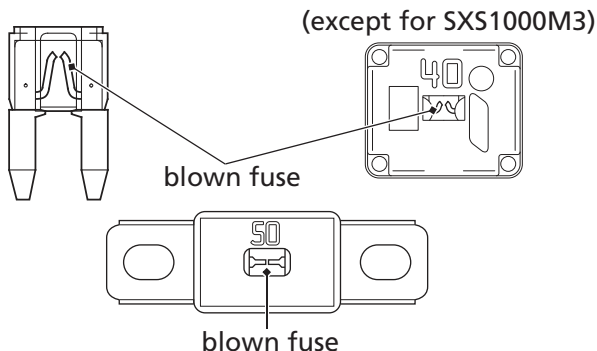

Check all the fuses before looking elsewhere for another possible cause of the problem. Replace any blown fuses and check component operation.

The main fuse and circuit fuses are located in the fuse box under the front hood. The electric power steering (EPS) fuse is located under the front hood. (except for SXS1000M3)

The brake traction control system (BTCS) fuse is located under the front hood. (SXS1000M3L/M5L only)

Recommended Fuses

main fuse	50 A
circuit fuses	SXS1000M3/M3P/M5P/M5D 30 A, 20 A, 15 A × 4, 10 A × 3 SXS1000M3L/M5L 30 A × 2, 20 A, 15 A × 4, 10 A × 3
electric power steering (EPS) fuse (except for SXS1000M3)	40 A
brake traction control (BTCS) fuse (SXS1000M3L/M5L only)	40 A