

If a Fuse Blows

Brake Traction Control System (BTCS) Fuse Access (SXS1000M3L/M5L only)

1. Turn the ignition switch to OFF (w) before checking the fuse.
2. Remove the front hood (page 137).
3. To access the BTCS fuse, remove the fuse cover.
If the BTCS fuse is blown, see your dealer for this service.
4. Install the fuse cover.
5. Install the front hood.

