

Maintenance Schedule

Service the items listed at the indicated distance (or time, if given).											
			Initial maintenance	Regular maintenance interval							
FREQUENCY		x100 mi	1	6	12	18	24	30	36	Note	Refer to page
(Whichever comes first)		x100 km	1.5	10	20	30	40	50	60		
ITEMS		Hours	20	100	200	300	400	500	600		
	Lubricate all hinges, latches, and pivots					t			t		177
**	Inspect the following items:										—
	Suspension components										—
	Wheels										210
	Driveshaft boots										211
	Accelerator and brake pedals					t			t		182, 200
	Brake light switch										201
	Exhaust system										189
	Battery terminal condition										213
*	Check parking lock system adjustment		t						t		—
*	Check shift lever adjustment		t						t		—
**	Inspect the following items:										—
*	Tie-rod ends										—
*	Steering gearbox and boots								t		—
*	Brake hoses and lines										—
*	SXS underbody									4	—
*	Inspect evaporative emission control system (USA - 50 states [meets California])										—
	Replace the following items:										—
	Front and rear final gear oil										166, 168
*	Engine coolant										172
*	Brake fluid										—

* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 282).

** In the interest of safety, we recommend these items be serviced only by your dealer.

Note 4 Check the underbody whenever the under guard has been hit.