


# Engine Oil & Filters

5. Place an oil drain pan under the crankcase.
6. Remove the engine oil drain bolts and sealing washers.

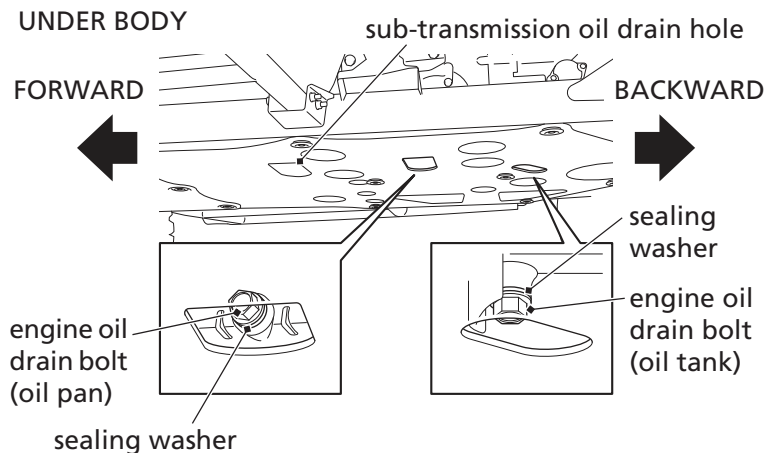

## NOTICE

*Be sure not to drain sub-transmission oil unless intending to do so. The engine and sub-transmission oils are not the connected.*

(cont'd)