

Air Cleaner

Replacing Air Cleaner

NOTICE

Clean the air cleaner housing cover prior to removal.

Remove the air cleaner to the right side.

When removing the air cleaner, be careful not to allow foreign objects to drop into the air intake ducts.

1. Lift the cargo bed (page 81).
2. Remove the air cleaner outer cover (page 140).
3. Clean the air cleaner housing cover and then remove it by removing the bolts.

UNDER CARGO BED

air cleaner housing cover

