

Indicators & Displays

Low Oil Pressure Indicator

This indicator comes on when the ignition switch is turned ON (q) and remains on until the engine is started.

This indicator comes on and stays on when the engine oil pressure is low enough to cause engine damage. If this indicator comes on while you are driving, stop as soon as possible, turn the engine off and check for oil leaks and oil level.

This indicator also comes on when the emergency valve is operated. (See more details about the emergency valve on page 221)

Hill Start Assist (HSA) Indicator

This indicator comes on briefly when the ignition switch is turned ON (q).

This indicator comes on when HSA is being used (page 43).

I - 4WD Indicator

This indicator comes on briefly when the ignition switch is turned ON (q).

This indicator comes on and stays on when there is a problem with your vehicle's HSA (Hill Start Assist), BTCS (Brake Traction Control System) and EBD (Electronic Brakeforce Distribution). If this happens, reduce speed and take your vehicle to a dealer as soon as possible.

Clutch Temperature Indicator

This indicator comes on briefly when the ignition switch is turned ON (q).

If the indicator light does not go off after indicator lamp check, have your vehicle inspected by your dealer.

This indicator flashes when the clutch temperature is unusually high. If the indicator flashes while driving, see page 228.