


Driver Controls

Drive Mode Select Switch

The drive mode select switch, located below the multi-function display, has two drive modes: 2WD and *I* - 4WD (page 91). You can switch between 2WD mode and *I* - 4WD mode by pressing the drive mode select switch at any time the engine is running; you can also select *I* - 4WD mode while driving. It is not recommended changing the drive mode under high throttle or excessive rear tire slippage.

When *I* - 4WD mode is selected and the ignition switch turned OFF (w) and then back to ON (q), the drive mode temporarily defaults to 2WD mode. Once the engine is re-started, *I* - 4WD mode will automatically resume.

- *I* - 4WD mode remains engaged until the 2WD mode is selected or the engine is stopped.
- *I* - 4WD mode will only engage while the engine is running.

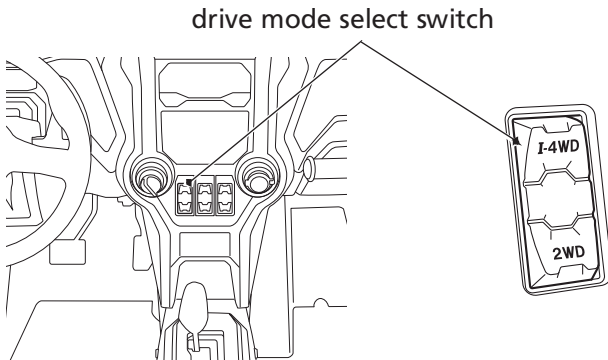

(cont'd)